



No.	Part name	No.	Part name	No.	Part name
1	Compressor	12	Liquid refrigerant pipe connection (ø9.53)	23	Water pressure switch
2	Safety valve	13	Check valve	24	Solenoid valves (SV1, SV2)
3	Water pump	14	Expansion vessel	25	Mounting foot (x4)
4	Water strainer	15	Expansion valve (1st cycle)	26	High pressure sensor (Pd)
5	Water flow switch	16	Plate heat exchanger (R410A-H2O)	27	Low pressure sensor (Ps)
6	T-branch	17	Plate heat exchanger (R410A-R134a)	28	High pressure switch (PSH)
7	3-way valve	18	Plate heat exchanger (R134a-H2O)	29	Switch for DHW emergency operation
8	Air purger	19	Expansion valve (2nd cycle)	A	R-134a check joint (for suction pressure measuring or vacuum operation)
9	Flexible water pipes for space heating (factory supplied accessory)	20	Upper cover for protection	B	R-134a check joint (for discharge pressure measuring or vacuum operation)
10	Electrical box	21	Manometer	C	R-134a check joint (for charge/removing refrigerant or vacuum operation)
11	Gas refrigerant pipe connection (ø15.88)	22	Water pressure ports (G 3/8")		