



| NO | HHAW PARTS NO | Q' TY/UNIT | PARTS NAME |
|----|------------------|------------|----------------------------------|
| 1 | HWRAC-50WEA A01 | 1 | BASE |
| 2 | HWRAC-50WEA A02 | 1 | COMPRESSOR |
| 3 | HWRAC-50NX2 A04 | 3 | PUSH NUT |
| 4 | HWRAC-50NX2 A05 | 1 | CONDENSER |
| 5 | HWRAC-50WEA A04 | 1 | REVERSING VALVE |
| 6 | HWRAC-50WEA A05 | 1 | SERVICE VALVE |
| 7 | HWRAC-50WEA A06 | 1 | SERVICE VALVE |
| 8 | HWRAC-50NX2 A09 | 1 | ELECTRIC EXPANSION VALVE |
| 9 | HWRAC-50WEA A07 | 1 | SOUND PROOF |
| 10 | HWRAC-50WEA A08 | 1 | SOUND PROOF |
| 11 | HWRAC-50WEA A09 | 1 | SOUND PROOF |
| 12 | HWRAC-50WEA A10 | 1 | SOUND PROOF |
| 13 | HWRAC-50WEA A12 | 1 | CONNECTING CORD (COMP) |
| 14 | HWRAC-50NX2 A16 | 1 | THERMISTOR (DEFROST) |
| 15 | HWRAC-50NX2 A17 | 1 | THERMISTOR SUPPORT |
| 16 | HWRAC-50NX2 A18 | 1 | COIL (REVERSING VALVE) |
| 17 | HWRAC-50NX2 A19 | 1 | COIL (EXPANSION VALVE) |
| 18 | HWRAC-50WEA A13 | 1 | PARTITION |
| 19 | HWRAC-50NX2 A21 | 1 | REACTOR |
| 20 | HWRAC-50NX2 A22 | 1 | FAN MOTOR SUPPORT |
| 21 | HWRAC-50NX2 A23 | 1 | FAN MOTOR |
| 22 | HWRAC-50NX2 A24 | 1 | PROPELLER FAN |
| 23 | HWRAC-50NX2 A25 | 1 | NUT (PROPELLER FAN) |
| 24 | HWRAC-50NX2 A26 | 1 | SIDE COVER (L) |
| 25 | HWRAC-50NX2 A27 | 1 | HANDLE |
| 26 | HWRAC-50NX2 A28 | 1 | FRONT COVER |
| 27 | HWRAC-50NX2 A29 | 1 | DISCHARGE GRILL |
| 28 | HWRAC-50WEA A14 | 1 | EARTH-PLATE |
| 29 | HWRAC-50NX2 A30 | 1 | THERMISTOR (OUTDOOR TEMPERATURE) |
| 30 | HWRAC-50NX2 A31 | 1 | SIDE COVER (R) |
| 31 | HWRAC-50WEA A15 | 1 | COVER (OUTDOOR THERMISTOR) |
| 32 | HWRAC-50NX2 A33 | 1 | TERMINAL COVER |
| 33 | HWRAC-50NX2 A34 | 1 | TOP COVER |
| 34 | HWRAC-50NX2 A35 | 1 | SERVICE VALVE COVER |
| 35 | HWRAC-50NX2 A36 | 1 | BUSH ASSEMBLY |
| 36 | HWRAC-50NX2 A37 | 2 | BUSH |
| 37 | HWRAC-50NX2 A38 | 1 | DRAIN PIPE |
| 38 | HWRAC-50NXA1 A02 | 1 | ELECTRIC PARTS PLATE |
| 39 | HWRAC-50WEA A16 | 1 | ELECTRIC PARTS COVER |
| 40 | HWRAC-50NX2 A41 | 1 | SUPPORT (P. W. B.) |
| 41 | HWRAC-50WEA A17 | 1 | H-HEAT SINK |
| 42 | HWRAC-50NX2 A43 | 1 | HEAT SINK2 |
| 43 | HWRAC-50FPA A01 | 1 | P. W. B. (MAIN) |
| 44 | HWRAC-50WEA A19 | 1 | P. W. B. (IPM) |
| 45 | HWRAC-50WEA A20 | 1 | 12 CORD ASSEMBLY |
| 46 | HWRAC-50NX2 A47 | 1 | CORD ASSEMBLY |
| 47 | HWRAC-50NX2 A48 | 1 | CORD ASSEMBLY |
| 48 | HWRAC-50NX2 A49 | 1 | ZETU-SHEET |
| 49 | HWRAC-50NX2 A50 | 2 | TERMINAL BOARD (2P) |
| 50 | HWRAC-50NX2 A51 | 1 | FUSE (25A) |
| 51 | HWRAC-50NX2 A52 | 2 | FUSE (3. 15A) |