



NO	HHAW PARTS NO	Q' TY/UNIT	PARTS NAME
	RAC-50WPB		
1	HWRAC-50NX2 A01	1	BASE
2	HWRAC-50NX2 A02	1	COMPRESSOR
3	HWRAC-50NX2 A03	3	COMPRESSOR RUBBER
4	HWRAC-50NX2 A04	3	PUSH NUT
5	HWRAC-50NX2 A05	1	CONDENSER
6	HWRAC-50WPB A01	1	REVERSING VALVE
7	HWRAC-50WEA A05	1	SERVICE VALVE
8	HWRAC-50WEA A06	1	SERVICE VALVE
9	HWRAC-50NX2 A09	1	ELECTRIC EXPANSION VALVE
10	HWRAC-50NX2 A10	1	SOUND PROOF
11	HWRAC-50WEA A08	1	SOUND PROOF
12	HWRAC-50NX2 A13	1	SOUND PROOF
13	HWRAC-50WPB A02	1	SOUND PROOF
14	HWRAC-50NX2 A14	1	O. L. R COVER
15	HWRAC-50NX2 A15	1	CONNECTING CORD (COMP)
16	HWRAC-50NX2 A16	1	THERMISTOR (DEFROST)
17	HWRAC-50NX2 A17	1	THERMISTOR SUPPORT
18	HWRAC-SX10HAK A20	1	COIL (REVERSING VALVE)
19	HWRAC-50NX2 A19	1	COIL (EXPANSION VALVE)
20	HWRAC-50WEB A01	1	PARTITION
21	HWRAC-18WSPA A06	1	REACTOR
22	HWRAC-50WEB A02	1	FAN MOTOR SUPPORT
23	HWRAC-50NX2 A23	1	FAN MOTOR
24	HWRAC-50NX2 A24	1	PROPELLER FAN
25	HWRAC-50NX2 A25	1	NUT (PROPELLER FAN)
26	HWRAC-50NX2 A26	1	SIDE COVER (L)
27	HWRAC-50NX2 A27	1	HANDLE
28	HWRAC-50NX2 A28	1	FRONT COVER
29	HWRAC-50NX2 A29	1	DISCHARGE GRILL
30	HWRAC-50WEB A03	1	EARTH-PLATE
31	HWRAC-E14H3 914	1	THERMISTOR (OUTDOOR TEMPERATURE)
32	HWRAC-50NX2 A31	1	SIDE COVER (R)
33	HWRAC-18WSPA A24	1	TC-COVER
34	HWRAC-18WSPA A09	1	REAR-COVER
35	HWRAC-50WEB A04	1	TERM-COVER
36	HWRAC-18WSPA A10	1	TOP COVER
37	HWRAC-50NX2 A35	1	SERVICE VALVE COVER
38	HWRAC-50NX2 A36	1	BUSH ASSEMBLY
39	HWRAC-50NX2 A37	2	BUSH
40	HWRAC-50NX2 A38	1	DRAIN PIPE
41	HWRAC-50WEB A05	1	ELECTRIC PARTS PLATE
42	HWRAC-50WEB A06	1	ELECTRIC PARTS COVER
43	HWRAC-50WEB A07	1	SUPPORT (P. W. B.)
44	HWRAC-50WEB A08	1	HEAT SINK
45	HWRAC-50WPB A03	1	P. W. B. (MAIN)
46	HWRAC-50WEB A10	1	12 CORD ASSEMBLY
47	HWRAC-50WEB A11	1	CORD ASSEMBLY
48	HWRAC-18WEB A18	1	TERMINAL BOARD (5P)
49	HWRAC-50NX2 A51	1	FUSE (25A)
50	HWRAC-50NX2 A52	2	FUSE (3. 15A)
51	HWRAC-50WEB A12	1	BASE
52	HWRAC-50WEB A13	1	SUPPORT (P. W. B.)