



NO.	HHAW PARTS NO.		Q'TY/ UNIT	PARTS NAME
	RAC-25FXB	RAC-35FXB		
1	HWRAC-25FXB	A01	1	BASE
2	HWRAC-25YH4	A02	1	COMPRESSOR
3	HWRAC-25YH4	A04	3	PUSH NUT
4	HWRAC-25FXA	A01	1	CONDENSER
5	HWRAC-25FXB	A02	1	REVERSING VALVE
6	HWRAC-25FXB	A03	1	2S-VALVE
7	HWRAC-25FXB	A04	1	3S-VALVE
8	HWRAC-25FXB	A05	1	SOUND PROOF COVER ASSEMBLY
9	HWRAC-18WSA	A09	1	SOUND PROOF COVER ASSEMBLY
10	HWRAC-25FXB	A06	1	SOUND PROOF COVER ASSEMBLY
11	HWRAC-E08H	A05	1	ELECTRIC EXPANSION VALVE
12	HWRAC-18WSA	A10	1	O.L.R. COVER
13	HWRAC-18WSA	A11	1	CONNECTING CORD (COMPRESSOR)
14	HWRAC-D10EX	A08	1	THERMISTOR (DEFROST)
15	HWRAC-25WX8	A02	1	THERMISTOR SUPPORT
16	HWRAC-SX10HAK	A20	1	COIL (REVERSING VALVE)
17	HWRAC-D10EX2	A07	1	COIL (EXPANSION VALVE)
18	HWRAC-25FXB	A07	1	PARTITION
19	HWRAC-18WEB	A10	1	REACTOR 1
20	HWRAC-D10EX	A11	1	FAN MOTOR SUPPORT
21	HWRAC-50NX2	A23	1	FAN MOTOR
22	HWRAC-14BH3	914	1	PROPELLER FAN
23	HWRAC-25YH4	A24	1	NUT (PROPELLER FAN)
24	HWRAC-25YH4	A25	1	SIDE COVER (L)
25	HWRAC-25YH4	A26	1	HANDLE
26	HWRAC-25FXB	A08	1	FRONT COVER
27	HWRAC-E14H3	909	1	DISCHARGE GRILL
28	HWRAC-25FXB	A09	1	ELECTRIC PARTS PLATE
29	HWRAC-35WPB	A08	1	ELECTRIC PARTS COVER
30	HWRAC-25YH4	A50	1	DRAIN PIPE
31	HWRAC-18WEB	A19	1	TERMINAL BOARD (5P)
32	HWRAC-35WPB	A09	1	HEAT SINK (REGURATOR 1)
33	HWRAC-25FXB A10	HWRAC-35FXB A11	1	P.W.B. (POWER)
34	HWRAC-35WPB	A11	1	SUPPORT (P.W.B.)
35	HWRAC-18WEB	A22	1	FUSE (15A)
36	HWRAC-10EH4	A13	1	COVER (OUT DOOR THERMISTOR)
37	HWRAC-D10EX	A17	1	THERMISTOR (OUTDOOR TEMPERATURE)
38	HWRAC-25YH5	A03	1	SIDE COVER (R)
39	HWRAC-35WPB	A12	1	TERMINAL COVER
40	HWRAC-25YH4	A46	1	TOP COVER
41	HWRAC-25YH4	A47	1	SERVICE VALVE COVER
42	HWRAC-25YH4	A48	1	BUSH ASSEMBLY
43	HWRAC-25YH4	A49	1	BUSH
44	HWRAC-25YH4	A03	3	COMPRESSOR RUBBER
45	HWRAC-E08H	A11	1	FUSE (15A)
46	HWRAC-50NX2	A52	2	FUSE (3.15A)
47	HWRAC-25FXB	A12	1	VALVE PLATE