



NO	HHAW PARTS NO	Q' TY/UNIT	PARTS NAME
1	HWRAC-50WPC A01	1	BASE
2	HWRAC-50WPC A02	1	COMPRESSOR
3	HWRAC-50NX2 A04	3	PUSH NUT
4	HWRAC-50WEC A01	1	CONDENSER
5	HWRAC-50WPC A03	1	REVERSING VALVE
6	HWRAC-50WEA A05	1	SERVICE VALVE
7	HWRAC-50WEA A06	1	SERVICE VALVE
8	HWRAC-50WEC A03	1	ELECTRIC EXPANSION VALVE
9	HWRAC-10EH4 A05	1	SOUND PROOF
10	HWRAC-50WPC A04	1	SOUND PROOF
11	HWRAC-50WEC A05	1	SOUND PROOF
12	HWRAC-50WEC A06	1	SOUND PROOF
13	HWRAC-50WEC A07	1	SOUND PROOF
14	HWRAC-50WEC A08	1	SOUND PROOF
15	HWRAC-50WPC A05	1	O. L. R COVER
16	HWRAC-50WEA A12	1	CONNECTING CORD (COMP)
17	HWRAC-50NX2 A16	1	THERMISTOR (DEFROST)
18	HWRAC-50NX2 A17	1	THERMISTOR SUPPORT
19	HWRAC-SX10HAK A20	1	COIL (REVERSING VALVE)
20	HWRAC-50WEC A10	1	COIL (EXPANSION VALVE)
21	HWRAC-50WPC A06	1	PARTITION
22	HWRAC-18WSPA A06	1	REACTOR
23	HWRAC-50WEB A02	1	FAN MOTOR SUPPORT
24	HWRAC-K10HCG A08	1	FAN MOTOR
25	HWRAC-50WEC A12	1	PROPELLER FAN
26	HWRAC-50NX2 A25	1	NUT (PROPELLER FAN)
27	HWRAC-50NX2 A26	1	SIDE COVER (L)
28	HWRAC-50NX2 A27	1	HANDLE
29	HWRAC-50WEC A13	1	FRONT COVER
30	HWRAC-50WEB A20	1	BUTYL
31	HWRAC-50WEC A14	1	DISCHARGE GRILL
32	HWRAC-50WEA A14	1	EARTH-PLATE
33	HWRAC-E14H3 914	1	THERMISTOR (OUTDOOR TEMPERATURE)
34	HWRAC-50NX2 A31	1	SIDE COVER (R)
35	HWRAC-18WSPA A24	1	TC-COVER
36	HWRAC-50WEC A15	1	H-SHEET
37	HWRAC-50WEC A16	1	TERMINAL COVER
38	HWRAC-SX18HAK A28	1	TOP COVER
39	HWRAC-50NX2 A35	1	SERVICE VALVE COVER
40	HWRAC-50NX2 A36	1	BUSH ASSEMBLY
41	HWRAC-50NX2 A37	2	BUSH
42	HWRAC-50NX2 A38	1	DRAIN PIPE
43	HWRAC-50WEC A17	1	ELECTRIC PARTS PLATE
44	HWRAC-50WPC A07	1	ELECTRIC PARTS COVER
45	HWRAC-50WEB A07	1	SUPPORT (P. W. B.)
46	HWRAC-50WEB A08	1	HEAT SINK
47	HWRAC-50WPC A08	1	P. W. B. (MAIN)
48	HWRAC-50WEB A10	1	12 CORD ASSEMBLY
49	HWRAC-50WEB A11	1	CORD ASSEMBLY
50	HWRAC-K10HCG A12	1	TERMINAL BOARD (5P)
51	HWRAC-50NX2 A51	1	FUSE (25A)
52	HWRAC-50NX2 A52	2	FUSE (3. 15A)
53	HWRAC-50WEB A13	1	SUPPORT (P. W. B.)